



Loading Data From A Workspace

Input Type: Workspace

Input/Output supports the loading of image data from one workspace to another. To load data from a workspace into the current workspace (the workspace selected when Input/Output was opened):

Open Input/Output.

Use the Workspace drop-down menu to select a Workspace. [1].

Use the File drop-down menu to select a data set [2].

The selected data to be previewed in the Display window [3].

Click Load Volume to load the selected file to the current workspace [4].

Click Exit to close the module [5].

