
Pad/Orient

Padding Data

The Pad/Orient option can be used to pad image data. This may be necessary to create a data set with certain dimensions or to make a data set isovolumetric (equal number of slices in each orientation).

- Open Input/Output.
- Navigate to and select the data set to be padded.
- Select Process [1] and Pad/Orient
 [2]
- Note the slice dimensions for the data are reported in the Padded Volume fields [3].

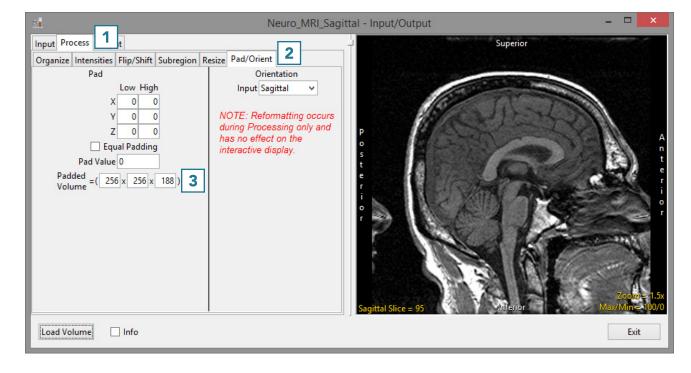



Pad/Orient (continued)

- To make the data set
 isovolumetric, update the
 appropriate Padded Volume field
 [4]. The Pad tool will try to apply
 an equal number of slices to pad
 the data in the pad axis [5].
- Users can also choose to pad all slices to either the Low or High field for the appropriate axis.
- Click Load Volume [6] to load the data.

