




Generating Surface Files from Objects

Segment provides users with the ability to export surface files for segmented structures.

- Select MRI_3D_Head and open Segment.
- Select File > Load Object Maps and load MRI_3D_Head.obj.
- Right click on the object list **1** and select Extract Surface. **2**



Download the MRI_3D_Head data set to follow along <http://analyzedirect.com/data/>

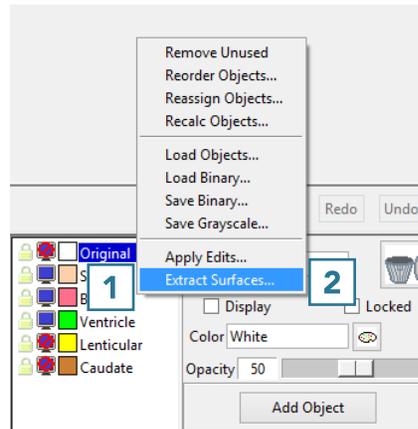

- Select the objects that you will use to generate a surface file. **3**
- The output surface name will be the same as the object name. If desired, rename the output surface file name. **4**
- Select the surface generation method. **5**
- Set the Output Directory. **6**
- Choose the output format. **7**
- Click Extract Surface(s). **8**
- When surface generation is complete a notification will be returned letting you know that the selected surfaces have been generated and saved. Click OK **9** to close the window.

